

Technical Newsletter

#tnl2016-0021k

다이싱쏘 연수 코스 「계층 3 (또는 멘테난스 2) 」 을 수강하신 고객님께

소개

2012년 1월 1일 이후에 출하된 다이싱쏘 중에서 기계지령^{※1} (CE 마크^{※2}) 에 대응한 장비는 보다 더 안전을 배려한 설계로 변경 되었습니다. 따라서 연수에서 실시한 멘테난스 작업의 일부를 고객이 실시할 수 없는 것을 알려 드립니다.

<이 알림의 대상 장비>

고객이 보유하신 장비	2012년 1월 1일 이전 출하 장비	2012년 1월 1일 이후 출하 장비	
		기계 지령 대응 장비	기계 지령 비대응 장비
DAD322	제외	대상	제외
3000 시리즈 ^{※3}	제외	대상	제외
6000 시리즈 ^{※3}	제외	대상	제외

※1 기계에 대한 「필수 안전 요구 사항」 을 정한 것.

※2 「필수 안전 요구 사항」 의 적합함을 증명하는 마크로 제품을 EU 지역에 수출하기 위해 부착이 의무화 되어있음.

※3 DAD3650, DFD6341, DFD6560 은 표준 사양으로 기계 지령에 맞추었기 때문에 표준 사양의 경우는 출하 시기에 관계없이 모든 장비가 대상이 됩니다.

대상 장비의 식별 방법

대상 장비는 외장 커버등 안전 스위치 근처에 아래 라벨이 부착되어 있습니다.

각 장비의 구체적 부착 부분에 대해서는 첨부 자료를 참조해 주십시오.



해당 멘테난스 작업

대상 장비에서 아래 멘테난스 작업을 실시하면 안전 장치 (인터록)이 작동해 축 전원이 차단 됩니다. 따라서 고객이 작업하실 수 없습니다.

장비	해당 멘테난스 작업
DAD322 3000 시리즈	<ul style="list-style-type: none"> ● 현미경 교환 ● 정도 측정 ● 스피들 교환
6000 시리즈	<ul style="list-style-type: none"> ● 현미경 교환 ● 반송 조정 ● 정도 측정 ● 스피들 교환 ● 스피너 실 교환

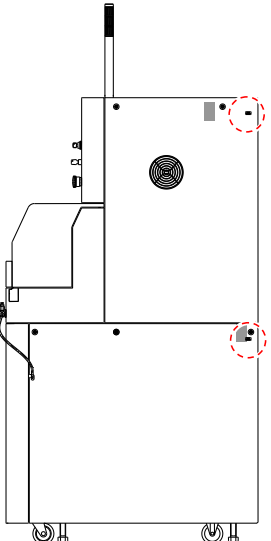

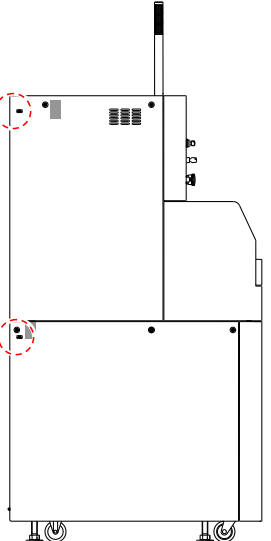
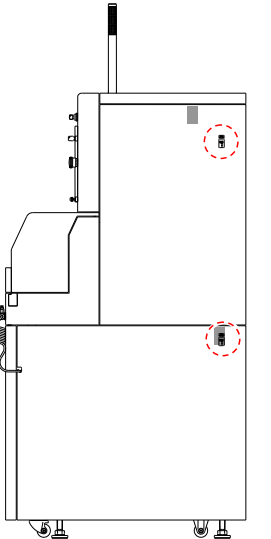
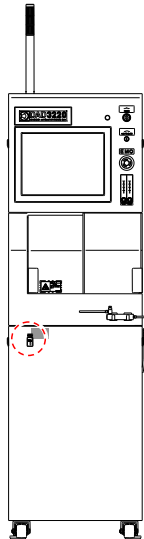
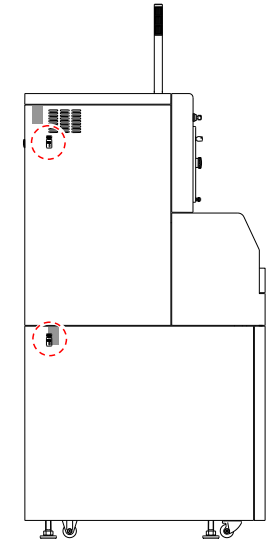
대응 방법

위에 해당하는 멘테난스 작업이 필요한 경우에는 디스코 서비스 엔지니어에게 작업을 의뢰해 주십시오.

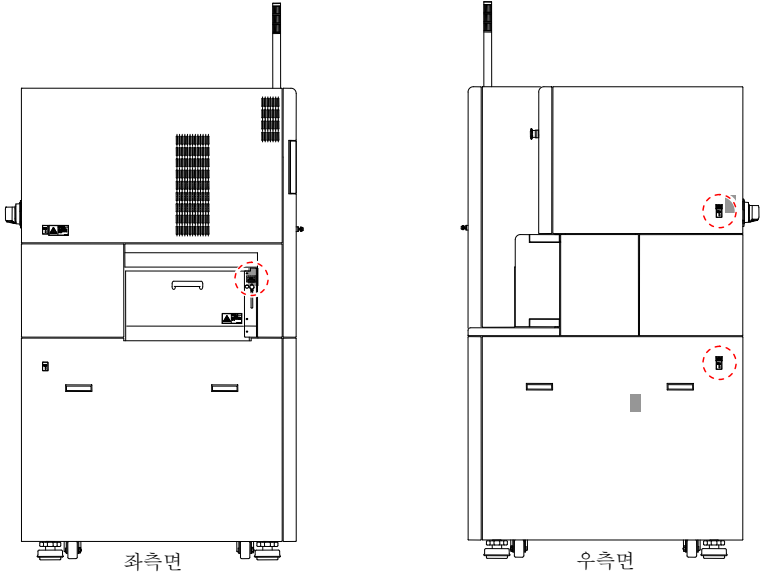
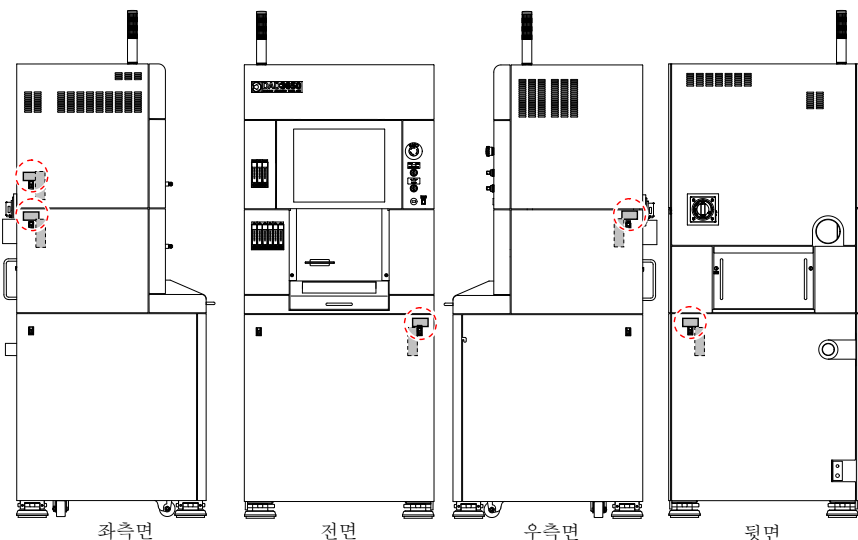
문의

본 건에 대한 문의는 연수센터 (trainctr@disco.co.jp) 또는 디스코 영업 담당자에게 문의해 주시기 바랍니다.

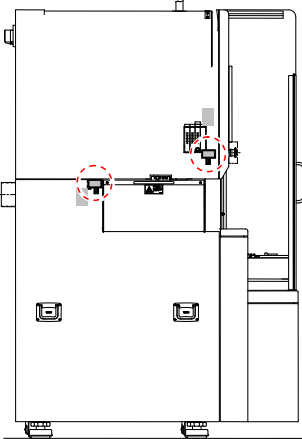
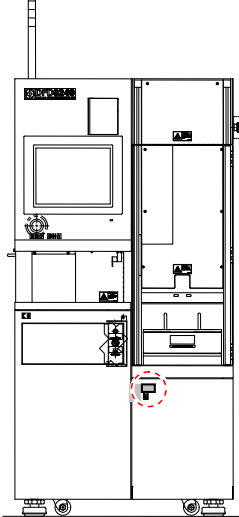
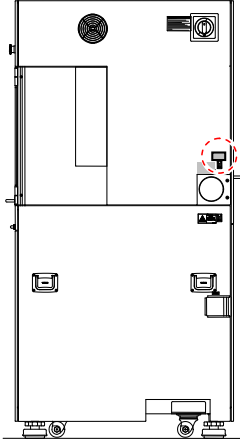
첨부 자료 : 장비별 라벨 부착 부분

장비	라벨 부착 부분		
DAD322	 <p style="text-align: center;">우측면</p>	 <p style="text-align: center;">전면</p>	 <p style="text-align: center;">좌측면</p>
DAD3220 DAD3230 DAD3430	 <p style="text-align: center;">우측면</p>	 <p style="text-align: center;">전면</p>	 <p style="text-align: center;">좌측면</p>

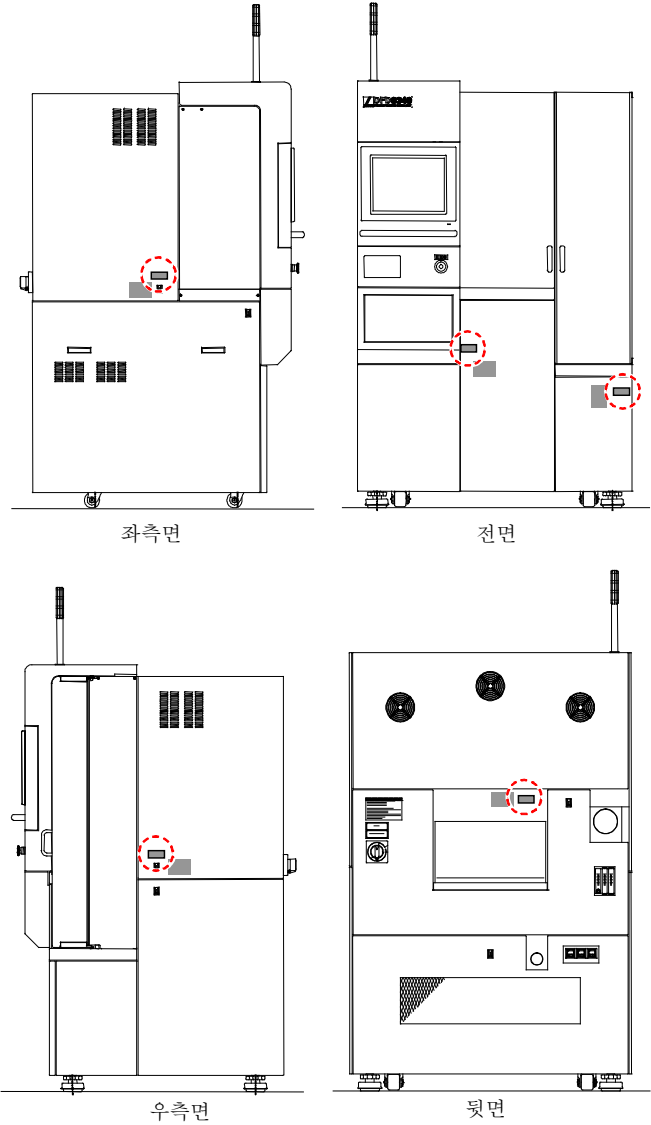
첨부 자료 : 장비별 라벨 부착 부분 (계속)

장비	라벨 부착 부분
DAD3350	 <p>좌측면 우측면</p>
DAD3650	 <p>좌측면 전면 우측면 뒷면</p>

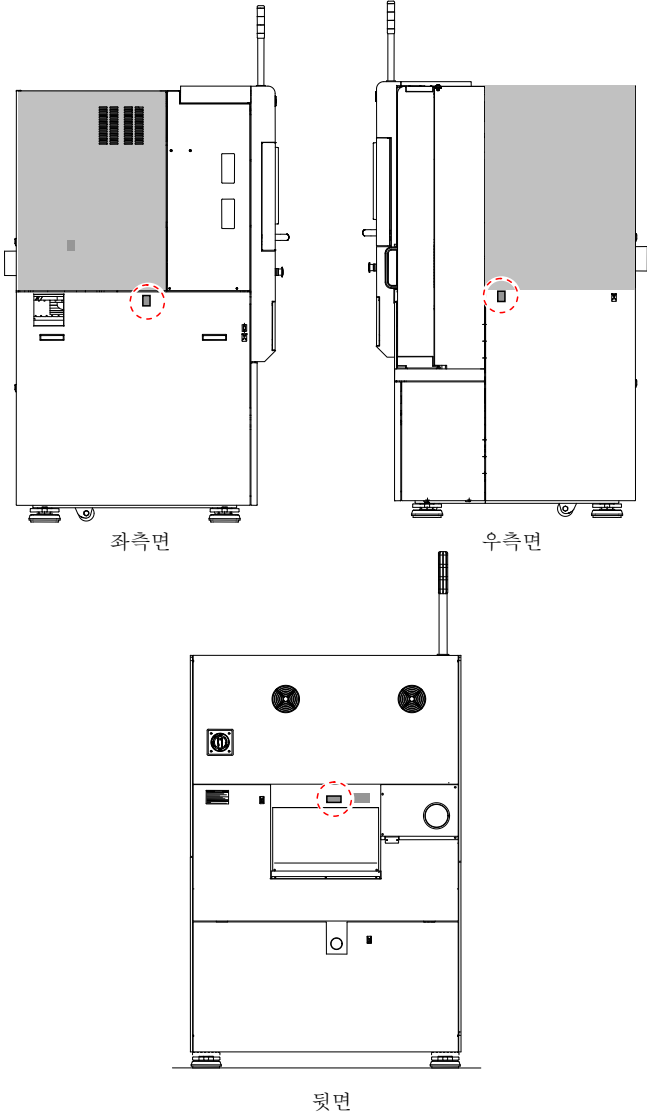
첨부 자료 : 장비별 라벨 부착 부분 (계속)

장비	라벨 부착 부분		
DFD6240	 <p data-bbox="507 958 576 987">좌측면</p>	 <p data-bbox="911 958 959 987">전면</p>	 <p data-bbox="1257 958 1305 987">뒷면</p>

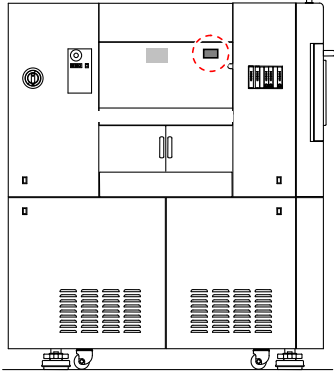
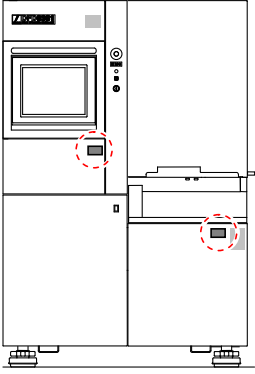
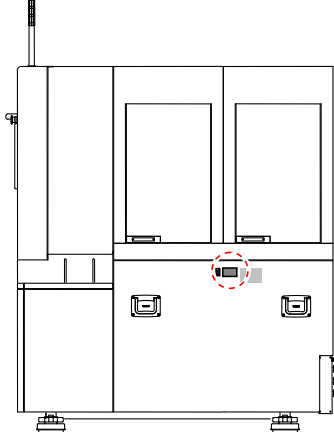
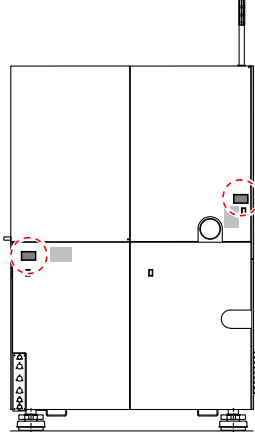
첨부 자료 : 장비별 라벨 부착 부분 (계속)

장비	라벨 부착 부분
DFD6340	 <p>The figure shows four views of the DFD6340 machine with red dashed circles indicating label attachment points:</p> <ul style="list-style-type: none"> 좌측면 (Left Side View): A label is attached to the side panel of the upper section. 전면 (Front View): Labels are attached to the side panel of the upper section and the lower section. 우측면 (Right Side View): A label is attached to the side panel of the upper section. 뒷면 (Back View): Labels are attached to the back panel of the upper section and the lower section.

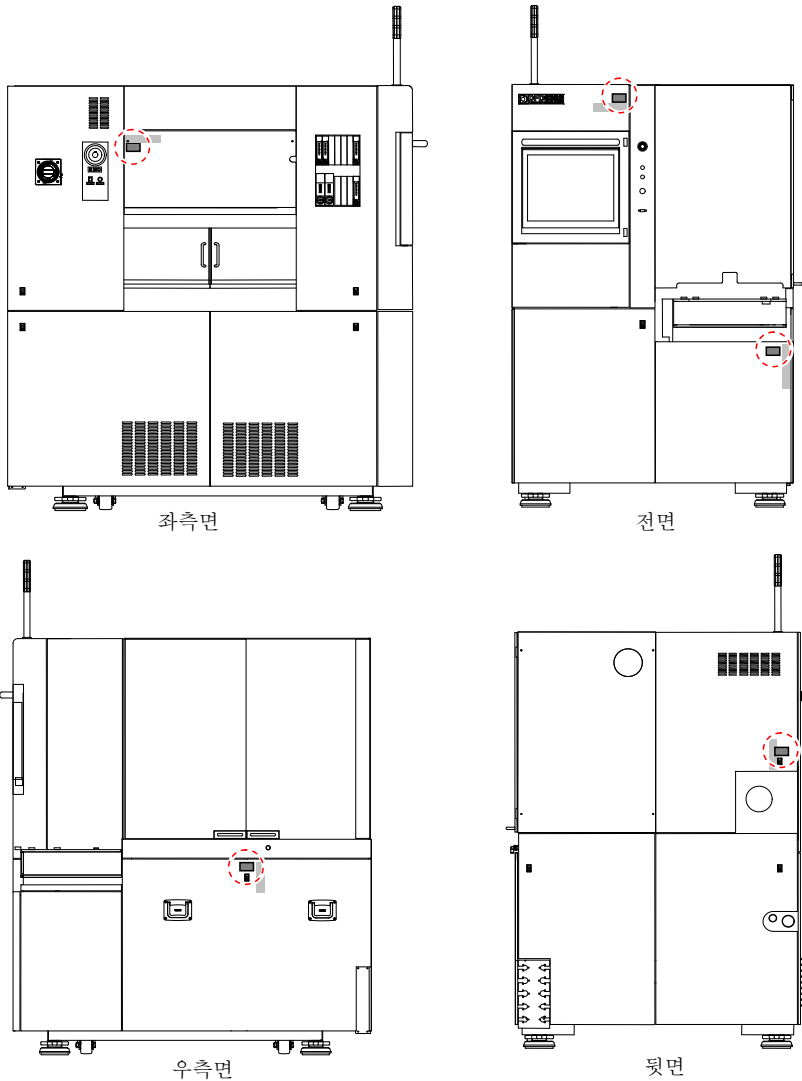
첨부 자료 : 장비별 라벨 부착 부분 (계속)

장비	라벨 부착 부분
DFD6341	 <p>좌측면</p> <p>우측면</p> <p>뒷면</p>

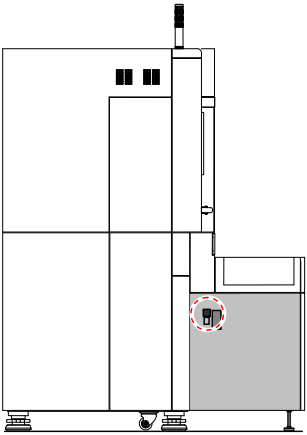
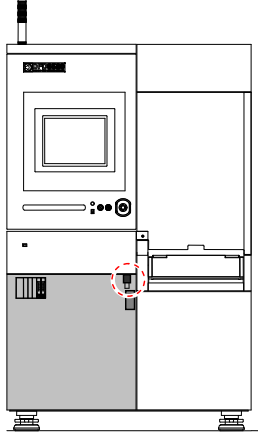
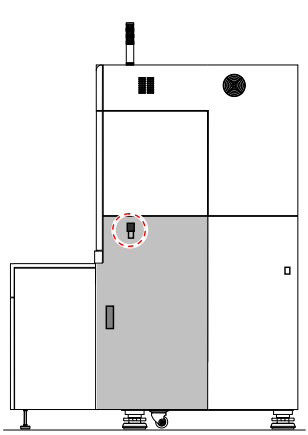
첨부 자료 : 장비별 라벨 부착 부분 (계속)

장비	라벨 부착 부분
<p>DFD6360 DFD6361</p>	<div style="display: flex; flex-wrap: wrap; justify-content: space-around;"> <div style="text-align: center;">  <p>우측면</p> </div> <div style="text-align: center;">  <p>전면</p> </div> <div style="text-align: center;">  <p>우측면</p> </div> <div style="text-align: center;">  <p>뒷면</p> </div> </div>

첨부 자료 : 장비별 라벨 부착 부분 (계속)

장비	라벨 부착 부분
DFD6362	 <p>The diagrams illustrate the label attachment points for the DFD6362 machine from four perspectives:</p> <ul style="list-style-type: none"> 좌측면 (Left Side): A label is attached to the upper left panel, near the control area. 전면 (Front): Labels are attached to the top right panel and the lower right panel. 우측면 (Right Side): A label is attached to the lower right panel. 뒷면 (Back): A label is attached to the upper right panel.

첨부 자료 : 장비별 라벨 부착 부분 (계속)

장비	라벨 부착 부분		
DFD6560	 <p data-bbox="523 882 592 909">좌측면</p>	 <p data-bbox="895 882 943 909">전면</p>	 <p data-bbox="1198 882 1267 909">우측면</p>

= End =

Translated by: W.Sung